


# FALKENSTEIN



**QUICK AND  
VERSATILE**

---

ADJUSTABLE FRAME  
AND TRACK FOR ONE  
PERSON INSTALLS

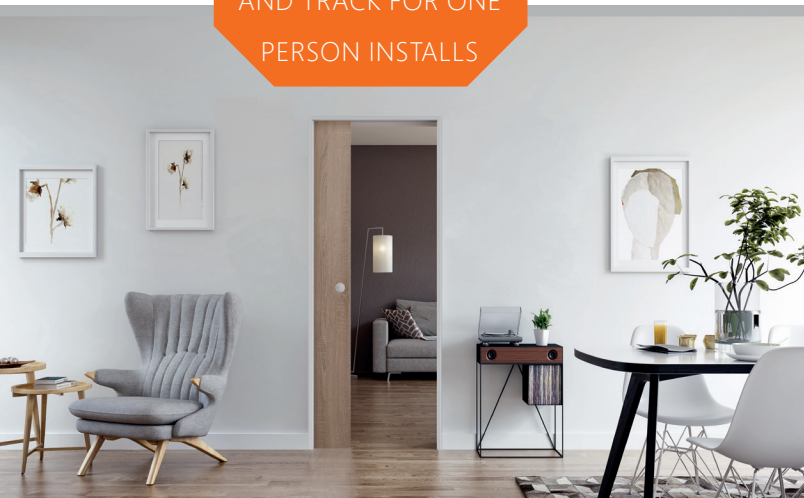

# VARIOpocket

Pocket door track and framing kit

# SKUS AND ACCESSORIES



**Door thickness:** 1-3/8" to 1-3/4" wood; 3/8" and 1/2" frameless glass  
**Studwork:** 2x4 wood or 3 5/8" metal  
**Load capacity:** 176 to 265 lb  
**Set includes:** Extruded aluminum track; ball bearing carriages; hold-in-place, soft-close or push-to-open end stops; basic or recessed mounting hardware for wood or clamps for frameless glass panels; floor guides for either application; pocket framing kit made from extruded aluminum; compression clamps

## Track and hardware

- 0080800 VARIOpocket 38x84", adjustable up to 38x84" door size, with basic wood hardware, 176 lb
- 0080801 VARIOpocket 40x96", adjustable up to 40x96" door size, with basic wood hardware, 176 lb
- 0080802 VARIOpocket 48x96", adjustable up to 48x96" door size, with basic wood hardware, 176 lb


## Door mounts

- 0080804 Glass Clamps with stainless steel look valance, max. 265 lb, 3/8" and 1/2" glass
- 0080809 Recessed Wood Door Mount, max. 265 lb

## Accessories

- 0080805 Soft Close (single), max. 176 lb, min. 24" door width
- 0080806 Soft Close (double), max. 176 lb, min. 34" door width
- 0080807 Push To Open, max. 176 lb, min. 24" door width (26" with pocket side Soft Close)
- 0080808 Sync, for biparting wood doors (basic mount only), max. 176 lb per panel
- 0080810 Heavy-Duty Wheels, max. 265 lb


# ROUGH OPENING GUIDE

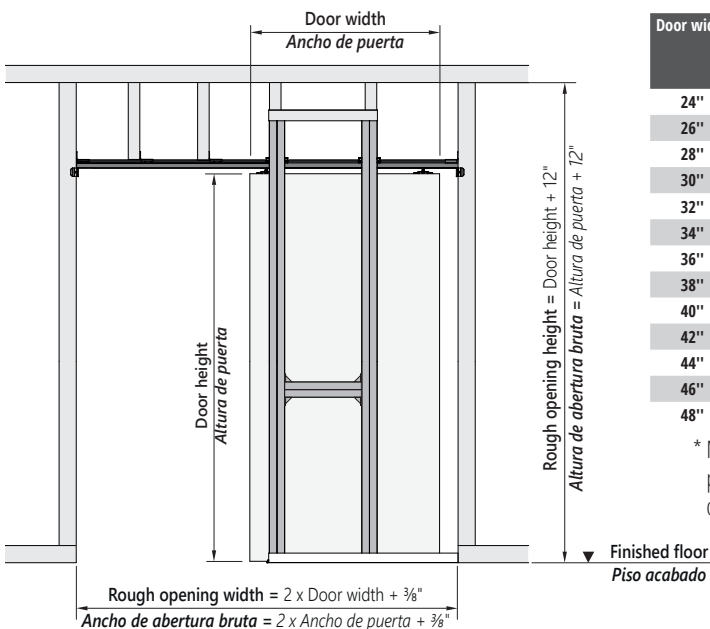

| Door width | Door height |           |          |           |          |           |          |           |
|------------|-------------|-----------|----------|-----------|----------|-----------|----------|-----------|
|            | 80"         |           | 82"      |           | 84"      |           | 96"      |           |
|            | RO width    | RO height | RO width | RO height | RO width | RO height | RO width | RO height |
| 24"        | 48 3/8"     | 92"*      | 48 3/8"  | 94"*      | 48 3/8"  | 96"*      | 48 3/8"  | 108"      |
| 26"        | 52 3/8"     | 92"*      | 52 3/8"  | 94"*      | 52 3/8"  | 96"*      | 52 3/8"  | 108"      |
| 28"        | 56 3/8"     | 92"*      | 56 3/8"  | 94"*      | 56 3/8"  | 96"*      | 56 3/8"  | 108"      |
| 30"        | 60 3/8"     | 92"*      | 60 3/8"  | 94"*      | 60 3/8"  | 96"*      | 60 3/8"  | 108"      |
| 32"        | 64 3/8"     | 92"*      | 64 3/8"  | 94"*      | 64 3/8"  | 96"*      | 64 3/8"  | 108"      |
| 34"        | 68 3/8"     | 92"*      | 68 3/8"  | 94"*      | 68 3/8"  | 96"*      | 68 3/8"  | 108"      |
| 36"        | 72 3/8"     | 92"*      | 72 3/8"  | 94"*      | 72 3/8"  | 96"*      | 72 3/8"  | 108"      |
| 38"        | 76 3/8"     | 92"*      | 76 3/8"  | 94"*      | 76 3/8"  | 96"*      | 76 3/8"  | 108"      |
| 40"        | 80 3/8"     | 92"*      | 80 3/8"  | 94"*      | 80 3/8"  | 96"*      | 80 3/8"  | 108"      |
| 42"        | 84 3/8"     | 92"*      | 84 3/8"  | 94"*      | 84 3/8"  | 96"*      | 84 3/8"  | 108"      |
| 44"        | 88 3/8"     | 92"*      | 88 3/8"  | 94"*      | 88 3/8"  | 96"*      | 88 3/8"  | 108"      |
| 46"        | 92 3/8"     | 92"*      | 92 3/8"  | 94"*      | 92 3/8"  | 96"*      | 92 3/8"  | 108"      |
| 48"        | 96 3/8"     | 92"*      | 96 3/8"  | 94"*      | 96 3/8"  | 96"*      | 96 3/8"  | 108"      |

\* Minimum required rough opening height. If you have enough headroom, you can install the pocket door without cutting the vertical pocket profiles. This requires a rough opening height of 108" or more.

# ROUGH OPENING GUIDE - BIPARTING DOORS

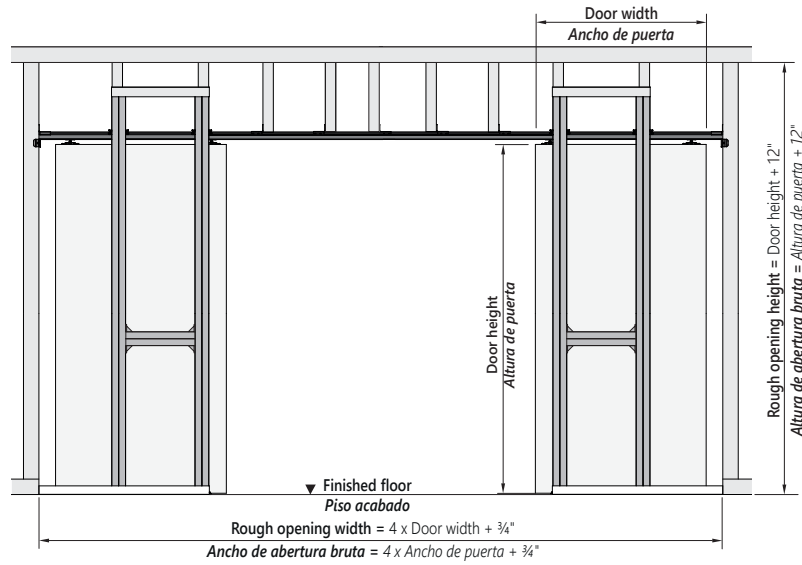

| Door width | Door height |           |          |           |          |           |          |           |
|------------|-------------|-----------|----------|-----------|----------|-----------|----------|-----------|
|            | 80"         |           | 82"      |           | 84"      |           | 96"      |           |
|            | RO width    | RO height | RO width | RO height | RO width | RO height | RO width | RO height |
| 24"        | 96 3/4"     | 92"*      | 96 3/4"  | 94"*      | 96 3/4"  | 96"*      | 96 3/4"  | 108"      |
| 26"        | 104 3/4"    | 92"*      | 104 3/4" | 94"*      | 104 3/4" | 96"*      | 104 3/4" | 108"      |
| 28"        | 112 3/4"    | 92"*      | 112 3/4" | 94"*      | 112 3/4" | 96"*      | 112 3/4" | 108"      |
| 30"        | 120 3/4"    | 92"*      | 120 3/4" | 94"*      | 120 3/4" | 96"*      | 120 3/4" | 108"      |
| 32"        | 128 3/4"    | 92"*      | 128 3/4" | 94"*      | 128 3/4" | 96"*      | 128 3/4" | 108"      |
| 34"        | 136 3/4"    | 92"*      | 136 3/4" | 94"*      | 136 3/4" | 96"*      | 136 3/4" | 108"      |
| 36"        | 144 3/4"    | 92"*      | 144 3/4" | 94"*      | 144 3/4" | 96"*      | 144 3/4" | 108"      |
| 38"        | 152 3/4"    | 92"*      | 152 3/4" | 94"*      | 152 3/4" | 96"*      | 152 3/4" | 108"      |
| 40"        | 160 3/4"    | 92"*      | 160 3/4" | 94"*      | 160 3/4" | 96"*      | 160 3/4" | 108"      |
| 42"        | 168 3/4"    | 92"*      | 168 3/4" | 94"*      | 168 3/4" | 96"*      | 168 3/4" | 108"      |
| 44"        | 176 3/4"    | 92"*      | 176 3/4" | 94"*      | 176 3/4" | 96"*      | 176 3/4" | 108"      |
| 46"        | 184 3/4"    | 92"*      | 184 3/4" | 94"*      | 184 3/4" | 96"*      | 184 3/4" | 108"      |
| 48"        | 192 3/4"    | 92"*      | 192 3/4" | 94"*      | 192 3/4" | 96"*      | 192 3/4" | 108"      |

\* Minimum required rough opening height. If you have enough headroom, you can install the pocket door without cutting the vertical pocket profiles. This requires a rough opening height of 108" or more.





# DOOR MOUNT OPTIONS



## WOOD BASIC

## WOOD RECESSED

## GLASS CLAMPS

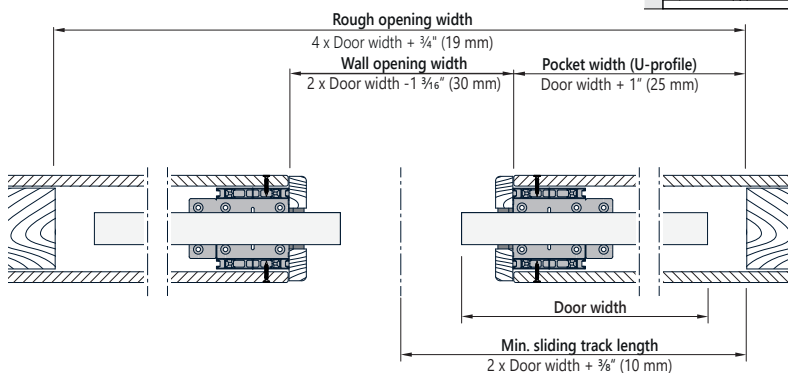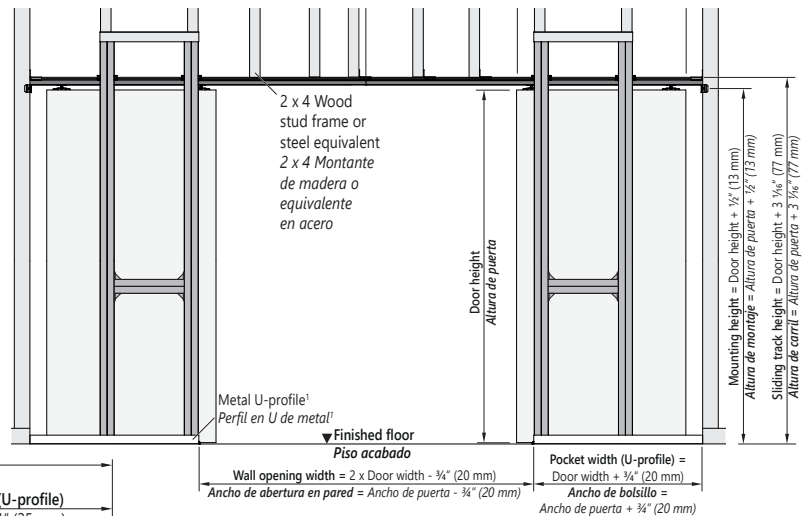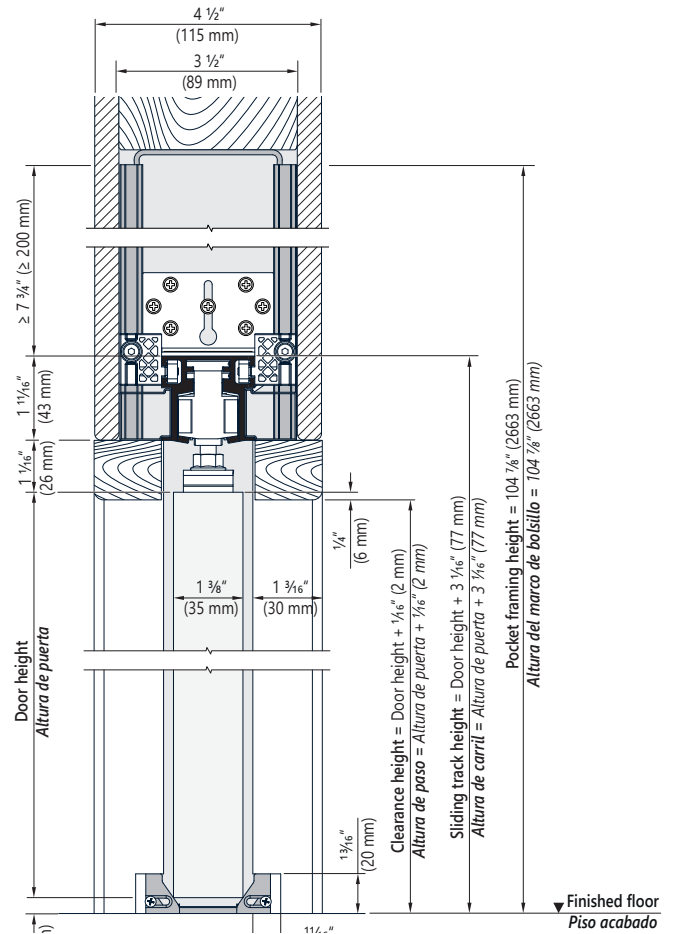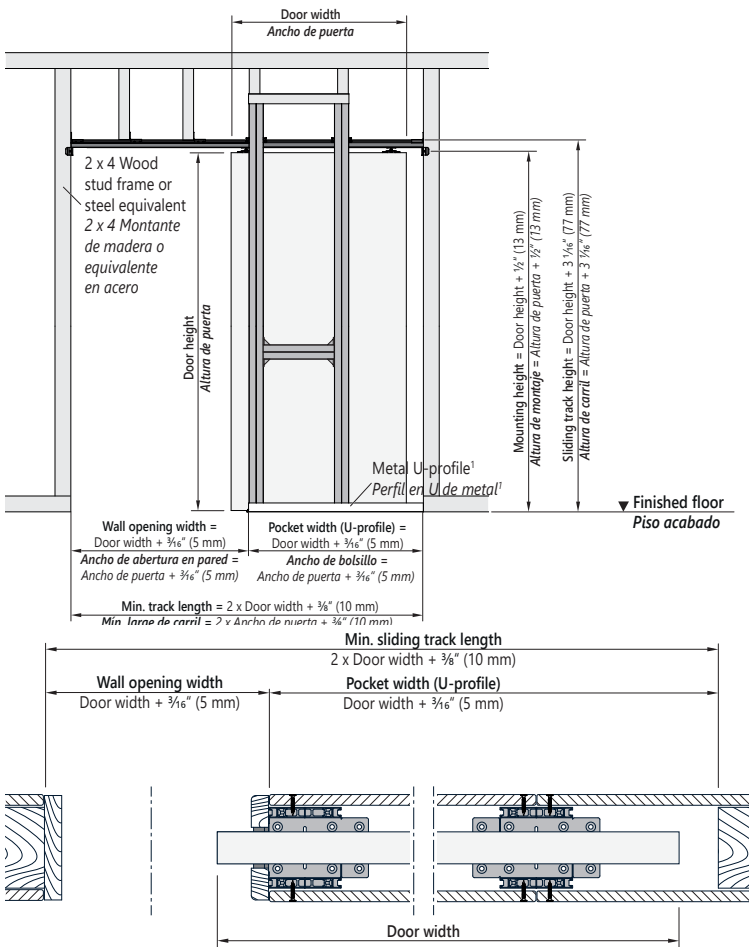




# DOOR MOUNT OPTIONS



## WOOD BASIC

## WOOD RECESSED

## GLASS CLAMPS

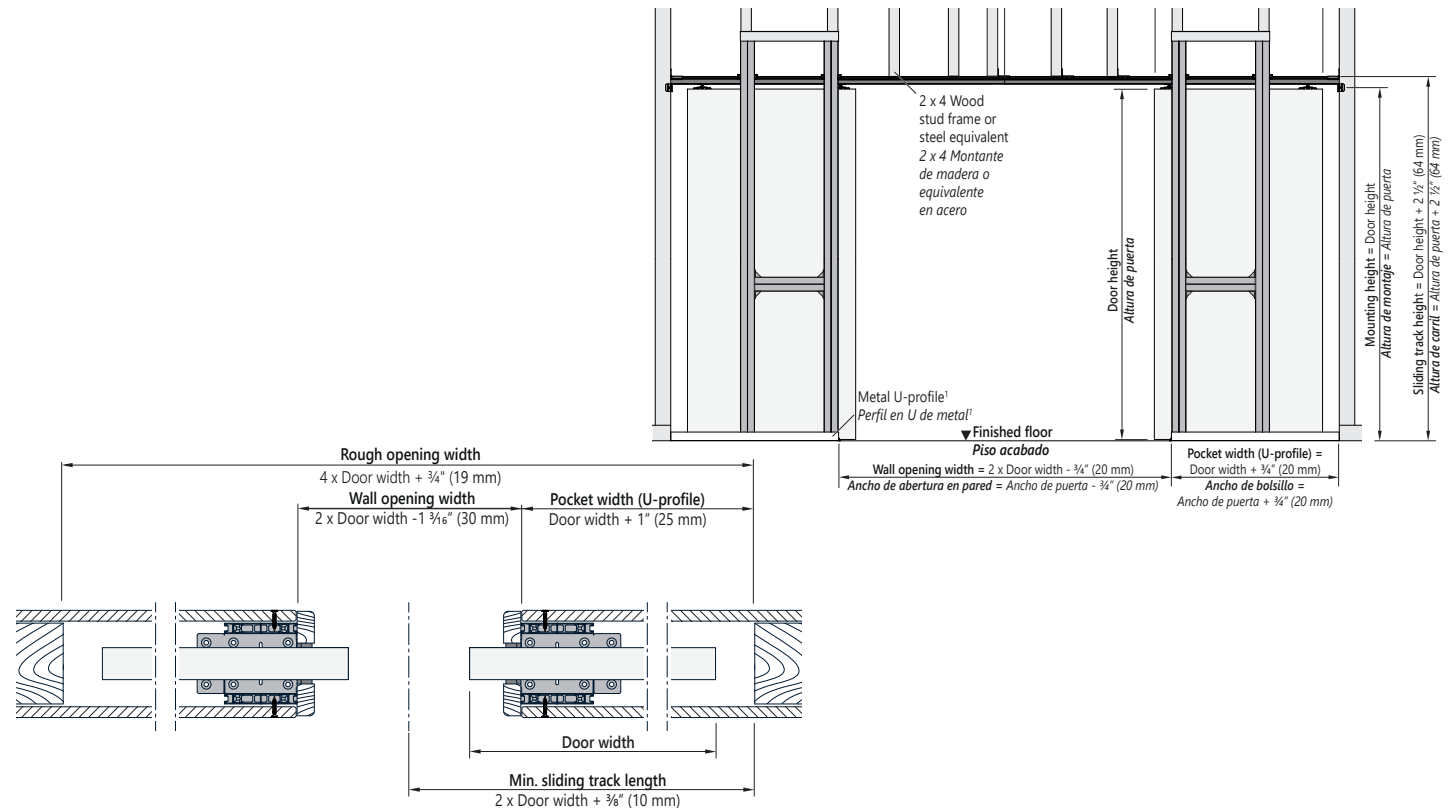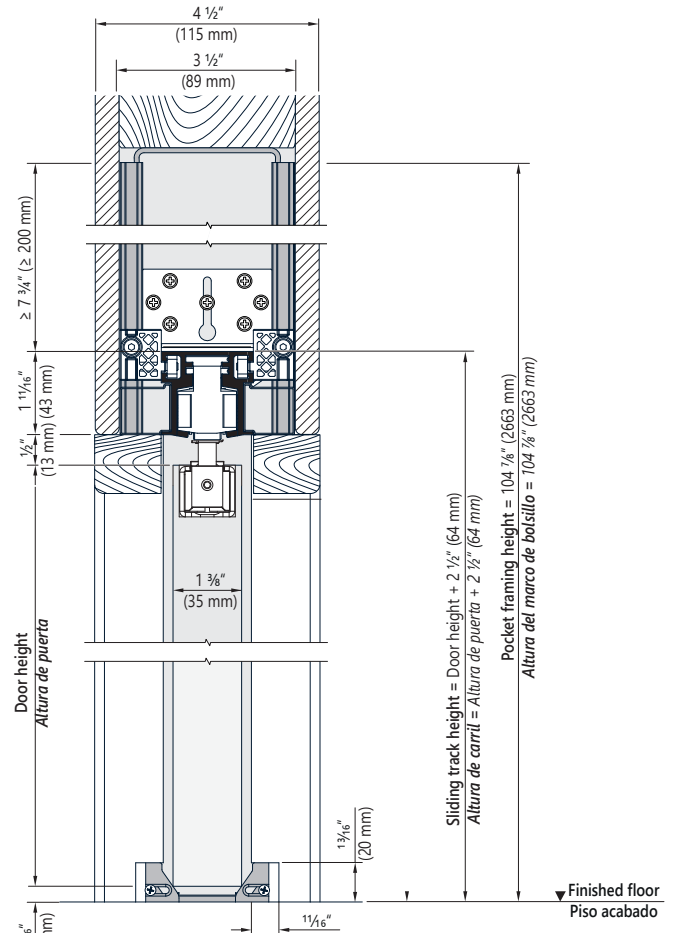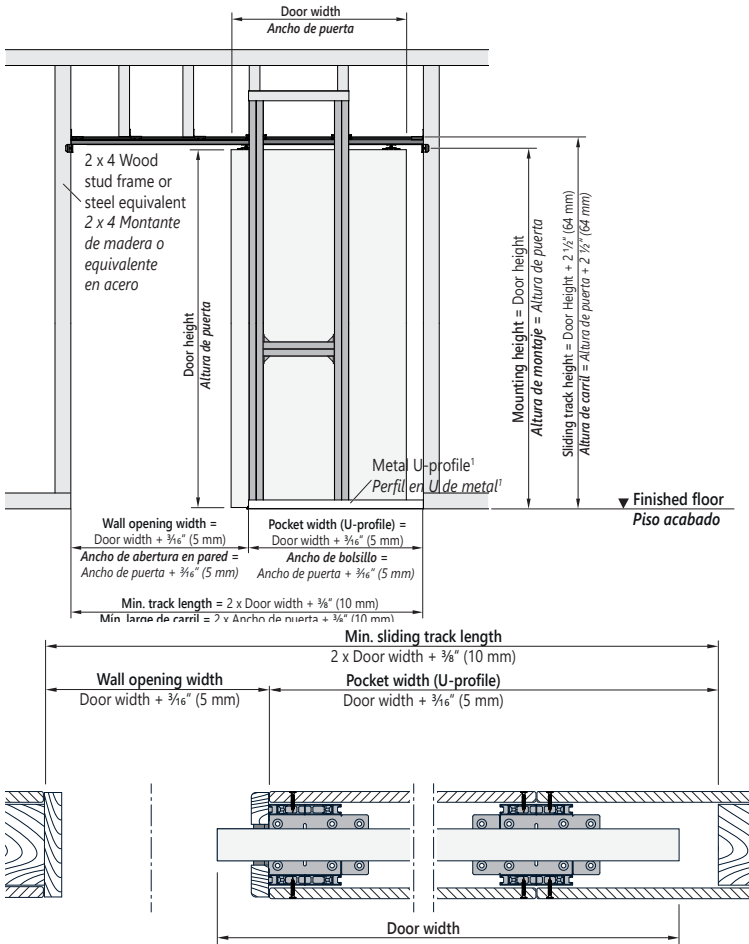

# DOOR MOUNT OPTIONS



## WOOD BASIC

## WOOD RECESSED

## GLASS CLAMPS

